

Technology that saves lives

Auxiliary Power Supplies APS6A, APS10A





Overview

The Auxiliary Power Supply (APS) is a UL 864, 10th Edition listed power supply. It is a 24 Vdc filtered-regulated, and supervised unit that can easily be configured to provide additional notification appliance circuits (NACs) or auxiliary power for Mass Notification/Emergency Communication (MNEC), as well as life safety applications.

The APS contains the circuitry to monitor and charge internal or external batteries. Its steel enclosure has room for up to two 24 ampere-hour batteries. The APS has four Class B (convertible to two Class A) NACs. These can be activated in one or two groups from the APS's unique dual input circuits. The APS has a door-mounted AC power indicator LED.

The APS also has room for and can power a number of different modules. These can be Signature AA-30 or AA-50 dual-channel audio amplifiers, UIO modules and/or GSA-RELs.

The APS is available in 6.5 or 10 ampere models. Each output circuit is has a capacity of three amperes; total current draw cannot exceed the unit's rating.

Features

- Allows for reliable filtered and regulated power to be installed where needed
- Cost effective system expansion
- Provides for Genesis and Enhanced Integrity notification appliance synchronization

- Supports coded output operation
- Self-restoring overcurrent protection
- Multiple signal rates
- Can be cascaded or controlled independently
- Easy field configuration
- On-board diagnostic LEDs identify wiring or internal faults
- Standard Kidde keyed lockable steel cabinet with removable door
- 110 and 230 Vac models available
- Accommodates 18 to 12 AWG wire sizes
- Optional tamper switch
- Dual battery charging rates

The APS meets current UL requirements and is listed as under the following standards:

Standard (CCN)	Description			
UL864 10th ed.ition (UOXX) Fire Alarm Systems				
UL636 (ANET, UEHX7)	Holdup Alarm Units and Systems			
UL609 (AOTX, AOTX7)	Local Burglar Alarm Units and Systems			
UL365 (APAW, APAW7)	Police Station Connected Burglar Alarm Units and Systems			
UL1076 (APOU, APOU7)	Proprietary Burglar Alarm System Units			
UL1610 (AMCX)	Central Station Alarm Unit			
ULC-S527 (UOXXC)	Control Units, Fire Alarm (Canada)			
ULC-S303 (AOTX7)	Local Burglar Alarm Units and Systems (Canada)			
C22.2 No. 205	Signaling Equipment (Canada)			

Application

The APS provides additional power and circuits for notification appliances and other 24 Vdc loads. It is listed for indoor dry locations and can easily be installed where needed.

Fault conditions are indicated on the on-board diagnostic LEDs, opening the APS input sense circuit and the trouble relay (if programmed). While this provides indication to the host system, the APS can still be activated upon command. A separate AC Fail contact is available on the APS circuit board, which can be programmed for trouble or AC Fail. There are seven on-board diagnostic LEDs: one for each NAC fault, one for battery fault, one for ground fault, and one for AC power.

The unique dual-input activation circuits of the APS can be activated by any voltage from 6 to 45 VDC (filtered-regulated) or 11 to 33 Vdc (full-wave rectified, unfiltered). The first input circuit can be configured to activate 1-4 of the four possible outputs. The second input circuit can be configured to control circuits 3 and 4. When outputs are configured for auxiliary operation, these circuits can be configured to stay on or automatically deactivate 30 seconds after AC power is lost. This feature makes these circuits ideal for door holder applications. The APS also has a separate 200 mA 24 Vdc output that can be used to power internal activation modules.

APS NACs can be configured for a 3-3-3 temporal or continuous output. This makes the APS ideal for applications requiring signaling rates that are not available from the main system.

In addition to the internally generated signal rates, the APS can also be configured to follow the coded signal rate of the main system NACs. This allows for the seamless expansion of existing NACs.

At the top of the steel enclosure, the APS has space and mounting bosses for:

Up to two SIGA-AA30 or SIGA-AA50 dual-channel audio amplifiers

- One GSA-UIO6 or GSA-UIO6R module motherboard
- Up to two GSA-UIO2R module motherboards
- Up to two GSA-REL releasing modules
- Up to two GSA-MP2L mounting plates modules


The above devices are in addition to the three factory-installed Signature module mounting brackets to the right of the APS circuit board.


Engineering Specification

Supply, where needed, Kidde APS Series Auxiliary Power Supplies (APS) that are interconnected to and supervised by the main system. The APS shall function as a stand-alone auxiliary power supply with its own fully-supervised battery compliment. The APS battery compliment shall be sized to match the requirements of the main system. The APS shall be capable of supervising and charging batteries having the capacity of 24 ampere-hours for Mass Notification/ Emergency Communication (MNEC) and life safety applications.

<< The APS shall be capable of installation for a seismic component Importance Factor of 1.5.>>The APS shall provide a minimum of four independent, fully supervised Class B circuits that can be field configurable for notification appliance circuits or auxiliary 24 Vdc power circuits. APS NACs shall be convertible to a minimum of two Class A NACs. Each APS output circuit shall be rated at 3 amperes at 24 VDC. Each output circuit shall be provided with automatically restoring overcurrent protection. The APS shall be operable from the main system NAC and/or Kidde Signature Series control modules. APS NACs shall be configurable for continuous or 3-3-3 temporal rate. Fault conditions on the APS shall not impede operation of main system NAC. The APS shall be provided with ground fault detection circuitry and a separate AC fail relay.

Cabinet Layout

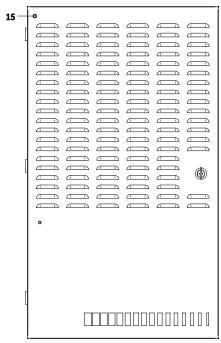

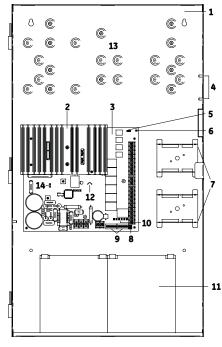

Enclosure: Houses the electronics and two standby batteries


Heat sink: Distributes heat away from the circuit board

- Circuit board: Provides connections for all circuits
- Tamper switch standoffs: 3-TAMP mounting standoffs
- 5 Jumper JP3: Ground fault enable or disable option
- AC LED: AC power on
- 7 Mounting brackets: Option module mounting brackets
- Jumpers JP1 and JP2: Class A or Class B NAC option
- DIP switches: Two eight-position DIP switches used for configuration
- 10 Circuit LEDs: NAC, battery, and ground fault trouble
- 11 Batteries: Up to two 12 V 24 Ah batteries fit in the enclosure. Alternatively use an external battery cabinet (BC-1 or BC-2).
- 12 Jumper JP4: Battery charging jumper
- 13 Option module (GSA-REL, GSA-UIO6/6R/2, GSA-MP2L) mounting area
- 14 Remote LED wiring harness connection
- 15 Remote LED: Indicates AC power is on

Typical Wiring


NAC Class A wiring

Connect one NAC circuit to one NAC output, either NAC1 or NAC3. Terminate the circuit at the NAC2 or NAC4 terminal screw, respectively.

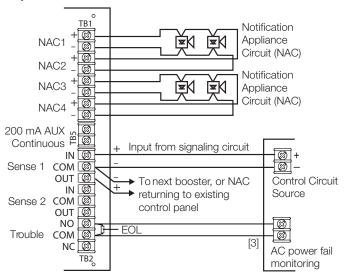

NAC Class B wiring

Connect a single NAC circuit to one NAC output. Terminate the circuit with a 15 k Ohm EOL resistor.

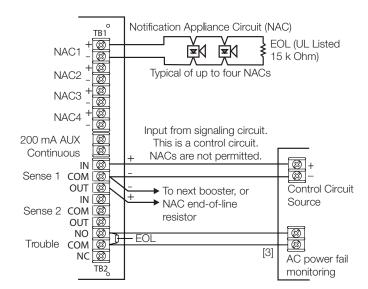


NAC wiring notes:


- A trouble on the APS is sensed on the existing control panel's NAC circuit causing a NAC trouble on that panel. This
 removes the need to separately monitor the trouble contact except for AC power failure (see [3] below).
 In an alarm condition, the APS allows NAC current to move downstream to devices connected to the existing control panel's NAC circuit.
- 2. Refer to the connected control panel's documentation for more details on NAC wiring.
- [3] The AC power failure panel connection annunciates at the panel but does not report off premises for a predetermined time period in U.S. fire applications.

Trouble relay wiring with four AUX circuits

When all four NAC/AUX circuits are configured as AUX circuits and DIP switch SW2-6 is ON, a GSA-CT2 module must be used to monitor the sense 1 trouble contacts and the trouble relay.

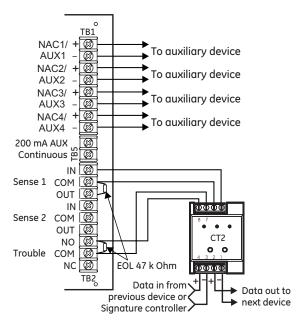

Dimensions

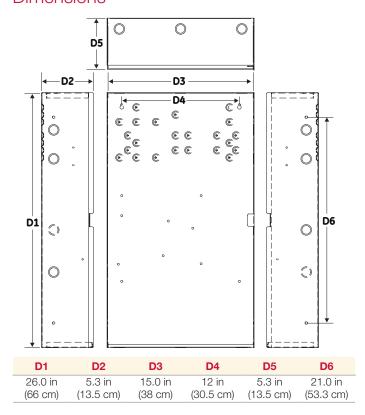



Technology that saves lives

Contact us

Phone: 888.244.9979 (Option 4)
Email: kidde.fire@carrier.com
Website: kidde-esfire.com

Kidde is a Carrier brand. 8985 Town Center Pkwy, Bradenton, FL 34202

© 2021 Carrier All rights reserved.

Specifications

Model	6.5 amp APS	10 amp APS	
AC Line Voltage	120VAC or 220-240VAC 50/60Hz	120VAC or 220-240VAC 50/60Hz	
	390 watts	580 watts	
Sense voltage (input)	6 to 45 Vdc, 11 to 33 Vrms (FWR and unfiltered DC)		
Sense current (input)	6 mA @ 24 Vdc, 3 mA @ 12 Vdc, 12 mA @ 45 Vdc		
Input Current	3mA @ 12Vdc, 6mA @ 24Vdc		
(from an existing NAC)			
Booster Internal	70mA + 35 mA for each circuit set to AUX		
Supervisory Current			
Booster Internal Alarm Current	270)mA	
NAC/AUX output voltage	19.1 to 26.85 Vdc		
NAC/AUX output current	3.0 A max. per circuit (10 A or 6.5 A max. total for all NACs) (10 A or 6.5 A max. total for all AUXs) [2]		
NAC/AUX class	Class B or Class A		
Wire size	18 to 12 AWG (0.75 to 2.5 sq mm)		
NAC EOL	UL: 15 k Ohm (P/N EOL-15)		
	ULC: Use P/N EOL-P1 and	select the 15 k Ohm resistor	
Auxiliary output	1 dedicated 200 mA auxiliary output, not supervised by APS,		
(continuous)	included in total current		
Common trouble relay	Form C, 1 A, 30 Vdc (resistive)		
Battery requirements [1]		fire applications	
	Under 10 Ah, cut JP4. 10 A	h or above, do not cut JP4.	
Battery charger current	1.2 A when the battery jumper wire is cut		
limit	2.1 A when the battery jumper wire is not cut		
Operating environment			
Temperature		(0 to 49 °C)	
Humidity		noncondensing	
Ground fault impedance	10 k Ohm		
Intended installation environment	Indoo	or-dry	

- [1] The maximum battery size the panel can charge is 24 Ah (12V24A or equivalent).
- [2] The maximum current is 8 amps for auxiliary circuits that operate when the panel is in standby.

Ordering Information

Catalog Number	Description	Shipping Wt. lb (kg)
APS6A	6.5 Amp Auxiliary Power Supply	
APS6A/230	6.5 Amp Auxiliary Power Supply (220V)	06 (11 0)
APS10A	10 Amp Auxiliary Power Supply	26 (11.8)
APS10A/230	10 Amp Auxiliary Power Supply (220V)	

Related Equipment			
12V6A5	12 V, 7.2 Amp Hour Battery, two required	3.4 (1.6)	
12V10A	12 V, 10 Amp Hour Battery, two required	9.5 (4.3)	
12V17A	12 V, 18 Amp Hour Battery, two required. See note 1.	13 (5.9)	
12V24A	12 V, 24 Amp Hour Battery, two required. See note 1.	20 (9.07)	
BPS-CVR	Electronics Protective Cover		
3-TAMP	Tamper switch	1.0 (0.6)	
BC-1	Battery Cabinet (up to 2 - 40 Amp Hour Batteries)	58 (26.4)	
APSEQ	Seismic kit for ABPS series Power Supplies. See note 2.		
BC-1EQ	Seismic hardening Kit for BC-1 cabinets. Order BC-1		
	Separately.		

Notes:

- Requires installation of separate battery cabinet.
- For earthquake anchorage, including detailed mounting weights and center of gravity detail, please refer to Seismic Application Guide 3101987-EN. Approval of panel anchorage to site structure may require local AHJ, structural, or civil engineer review.